




01782 280 888


VW T5 SPORTLINE SIDE BARS FITTING INSTRUCTIONS

PLEASE READ: PROFESSIONAL FITTING IS ESSENTIAL BUT IF YOU INSIST IN FITTING THESE SIDE BARS YOURSELF, HERE ARE SOME STEPS / GUIDELINES IN ORDER TO HELP YOU FIT THEM CORRECTLY.

Nearside Front Bracket

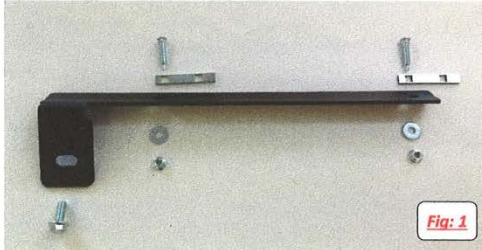

Nearside Rear Bracket

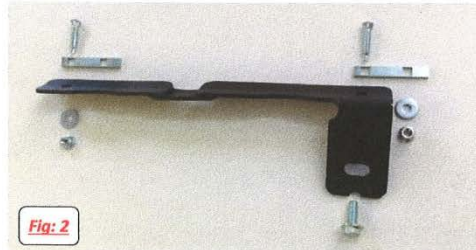

Step 1

First remove the retaining bolts for the plastic vehicle under trays. The trays can either be removed entirely or simply lowered to allow access to the underside of the sill.

Step 2

Identify the front and rear brackets as shown in [\(Fig: 1 & 2\)](#) above. Offer the brackets up to the vehicle in order to determine which rubber grommets need to be removed. Remove the required rubber grommets from the underside of the sill as shown in [\(Fig: 3\)](#)



Step 3

Assemble the Captive Toggles as shown in [\(Fig: 4\)](#) Note how the bolt is inserted into the square hole which is closest to the end of the steel plate.

Step 4

Insert the toggles into the underside of the sill. In some places it may be necessary to tap the steel plate between the inner and outer sill as shown in [\(Fig: 5\)](#) **This is an 'interference fit' which means it is intended to be tight! Ensure that the steel plate overhangs both sides of the hole as shown in [\(Fig: 6\)](#)**

Step 5

Attach the brackets to the toggle fixings using the nut and washer as shown in [\(Fig: 7\)](#) When both brackets are in place attach the sidebars using the two M10 bolts supplied as shown in [\(Fig: 8\)](#) Ensure all bolts are tight.



Step 6

Offer up the plastic under trays and cut them to fit around where the toggle bolts protrude from the vehicle. Finally buff the sidebars to remove any finger marks. Stand Back & ENJOY!!

If You Still Have Problems/Difficulties Fitting Your Side Bars, Please Contact Us:
Telephone: 01782 280888 | **E-Mail:** info@van-x.co.uk | **Website:** www.van-x.co.uk